

Work Order ID 147905 - 2

147905

Page 1

Friday, June 17, 2016 7:55:18 AM

Item ID: D350-567-141

Accept

N9000040100

Setup Start

NS1

Revision ID:

Item Name: Floor Window Close Out

Stop

NS2

Start Date: 6/7/2016 Start Qty: 2.00

2

Cust Item ID:

Required Date: 6/17/2016 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals:

Process Plan:

ML5

Date: JUN 17 2016

Tooling:

Date:

Run

Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Tool ID

Tool #

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

Draw Nbr

Revision Nbr

DSI 9590

F

DAS
21
9-89

160711

100

Document Control

0.00

100

DOCUMENT CONTROL

DC

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile & type labels per PPP D350-567-141 CHG004

DAS
27
9-89

110

Pick Kit

0.00

110

Packaging

Memo

0.00

Packaging

DAS
28
9-89

DAS
28
9-89

JUL 11 2016

120

QC4- 100% Inspect kits for completeness

0.00

120

QC

Memo

0.01

Quality Control

DAS
27
9-89

Work Order ID 147905

Friday, June 17, 2016 7:55:18 AM

147905

Page 2

Item ID: D350-567-141

Accept

N900040100

Setup Start

NS1

Revision ID:

Item Name: Floor Window Close Out

Stop

NS2

Start Date: 6/7/2016 Start Qty: 2.00

2

Cust Item ID:

Required Date: 6/17/2016 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

Run

Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Tool ID

Tool #

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

130

130

Packaging

Packaging

Memo

0.00

Identify and pack for shipping as per PPP D350-567-141
Location:FG033

Sold

DAS
27
9-89

DAS
28
9-89

DEC 08 2016

140

140

QC

QC21- Final Inspection - Work Order Release

0.00

Memo

0.03

Quality Control

DAS
21
9-89

DEC 08 2016

DAS
21
9-89

DEC 08 2016

Picklist Print

Friday, June 17, 2016 7:55:17 AM

Page 1

Work Order ID: 147905

147905

Parent Item: D350-567-141

D350-567-141

~~Parent Item Name: Floor Window Glass Out~~

Start Date: 6/7/2016

Required Date: 6/17/2016

Start Qty: 2.00

Required Qty: 2.00

Comments: IPP REV:A 11.11.09 new issue DD verf:JLM IPP REV:B
12.01.23 AS PER ECN12-511 DD VERF:EC IPP REV:C 12.03.05
AS PER ECN12-537 DD VERF:EC IPP REV:D 13.04.01 AS PER
DSI9590 REV.E DD VERF:JLM IPP REV:E AS PER DSI9590 REV F JLM
VERIFIED BY:DD

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D4434-047		Manufactured	No				Each	3.0000		2			DAS 6 9-89
D4434-047									**				DAS 23 9-89
Cover Assembly													
					<u>Location</u>			<u>Loc Qty</u>		<u>Loc Code</u>			
					ST619			3					
					143450			3					
D3802-1		Manufactured	No			110	f	52.5918	2	4			DAS 6 9-89
D3802-1									**				DAS 23 9-89
Windows Seal (\$ Per Foot)													
					<u>Location</u>			<u>Loc Qty</u>		<u>Loc Code</u>			
					ST416			52.591836					
					146267			2.591836					
					147067			50					
D4434-041		Manufactured	No			110	Each	1.0000	1	2			DAS 6 9-89
D4434-041									**				DAS 23 9-89
Fwd Bracket Assembly													
					<u>Location</u>			<u>Loc Qty</u>		<u>Loc Code</u>			
					ST623			1					
					145964			1					

SEP 09 2016

JUL 11 2016

Picklist Print

Friday, June 17, 2016 7:55:17 AM

Page 2

Work Order ID: 147905

147905

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Glass Out

Start Date: 6/17/2016

Required Date: 6/17/2016

Start Qty: 2.00

Required Qty: 2.00

D4435-045 Manufactured No

110 Each

3.0000

1

2

D4435-045

T/R Bellcrank Cover Assembly

**

Location

Loc Qty

Loc Code

ST620

3

145619

3

D4435-9 Manufactured No

110 Each

31.0000

2

4

D4435-9

Bracket

**

Location

Loc Qty

Loc Code

ST098

31

145909

31

D4436-041 Manufactured No

110 Each

0.0000

1

2

D4436-041

Aft Bracket Assembly

**

D4441-1 Manufactured No

110 f

410.7970

2

4

D4441-1

Rubber Seal

**

Location

Loc Qty

Loc Code

ST422

410.797

120932

410.797

AN3-3A Purchased No

110 Each

92.0000

7

14

AN3-3A

Bolt

**

Location

Loc Qty

Loc Code

ST350

92

m134738

25

m134848

16

m134962

51

JUL 11 2016

Friday, June 17, 2016 7:55:18 AM

Shop Packet Print

Page 2

Picklist Print

Friday, June 17, 2016 7:55:18 AM

Page 3

Work Order ID: 147905

147905

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 6/17/2016

Required Date: 6/17/2016

Start Qty: 2.00

Required Qty: 2.00

AN525-10R6 Purchased No

110 Each

356.0000

2

4

AN525-10R6

Screw

**

Location

Loc Qty

Loc Code

ST329

356

M134502

356

AN525-832R7

Purchased No

110 Each

134.0000

2

4

AN525-832R7

Screw

**

Location

Loc Qty

Loc Code

GA

59

m134070

59

ST328

75

m134070

75

MS21042L06

Purchased No

110 Each

94.0000

7

14

MS21042L06

Nut

**

Location

Loc Qty

Loc Code

ST303

94

m134537

44

m134962

50

JUL 11 2016

Picklist Print

Friday, June 17, 2016 7:55:18 AM

Page 4

Work Order ID: 147905

147905

Parent Item: D350-567-141

D350-567-141

~~Parent Item Name: Floor Window Glass Out~~

Start Date: 6/17/2016

Required Date: 6/17/2016

Start Qty: 2.00

Required Qty: 2.00

MS21042L08

Purchased

No

110

Each

1,020.000

2

MS21042I 08

Nut

Location

Loc Qty

Loc Code

GA	310	
m133134	3	
m134063	307	
ST303	693	
m133922	37	
m134574	156	
m134654	300	
m134962	200	
ST308	17	
m134376	17	

DAS
27
9-89

DAS
28
9-89

MS21042L3

Purchased

No

110

Each

1,650.000

5

MS21042I 3

Nut

Location

Loc Qty

Loc Code

FP001	32	
m133790	32	
GA	232	
m133790	3	
m134360	229	
ST303	1386	
m134039	12	
m134634	2	
m134754	572	
m134943	800	

DAS
27
9-89

DAS
28
9-89

JUL 11 2016

Friday, June 17, 2016 7:55:18 AM

Shop Packet Print

Page 4

Picklist Print

Friday, June 17, 2016 7:55:18 AM

Page 5

Work Order ID: 147905

147905

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 6/7/2016

Required Date: 6/17/2016

Start Qty: 2.00

Required Qty: 2.00

MS21059L3
MS21059L3
 Nut Plate

Purchased No

110 Each 126.0000 2 4

DAS 28 9-89
 DAS 6 9-89

DAS 27 9-89

Location	Loc Qty	Loc Code
CA	8	
M129682	8	
ST301	92	
M135015	92	
ST303	26	
M133016	26	

2

MS35206-229
MS35206-229
 Screw

Purchased No

110 Each 109.0000 7 14

DAS 28 9-89
 DAS 6 9-89

DAS 27 9-89

Location	Loc Qty	Loc Code
ST271	109	
M134070	109	

7

NAS1149F0332P
NAS1149F0332P
 Washer

Purchased No

110 Each 1,712.000 12 24

DAS 28 9-89
 DAS 6 9-89

DAS 27 9-89

Location	Loc Qty	Loc Code
GA	312	
m133709	312	
ST262	1400	
m134257	37	
m134676	1363	

12

JUL 11 2016

Picklist Print

Friday, June 17, 2016 7:55:18 AM

Page 6

Work Order ID: 147905

147905

Parent Item: D350-567-141

D350-567-141

~~Parent Item Name: Floor Window Glass Out~~

Start Date: 6/7/2016

Required Date: 6/17/2016

Start Qty: 2.00

Required Qty: 2.00

NAS1149FN616P

Purchased

No

110

Each

110.0000

14

28

NAS1149FN616P

WASHER

Location

Loc Qty

Loc Code

ST263

10

M133988

10

ST264

100

M134738

50

M134738.

50

NAS1149FN816P

Purchased

No

110

Each

754.0000

2

NAS1149FN816P

WASHER

Location

Loc Qty

Loc Code

ST263

754

117316

754

JUL 11 2016

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-567 REV. E OR EARLIER
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-567 REV. 2 OR EARLIER
REF CANADIAN STC: SH92-18
FAA STC: SH989NE
FAA STC: SH990NE

1.0 Purpose

The purpose of this service instruction is to add the D350-567-141/-143/-145 Close-out Kits, which are intended for customers wishing to operate their aircraft with the interior floor window removed. The D350-567-141/-143/-145 Floor Window Close-out Kits provide a barrier around the interior and exterior vertical reference floor window to prevent objects from falling into the aircraft controls when the interior floor window is removed as shown in Figure 1. The -143 Kit is identical to the -141 Kit with the exception of the D4971-041 T/R Bellcrank Cover Assy which replaces the D4435-045 T/R Bellcrank Cover Assy on aircraft fitted with energy attenuating seats. The -145 Kit is similar to the -143 Kit but is only kit compatible with the AS350 B3e aircraft.

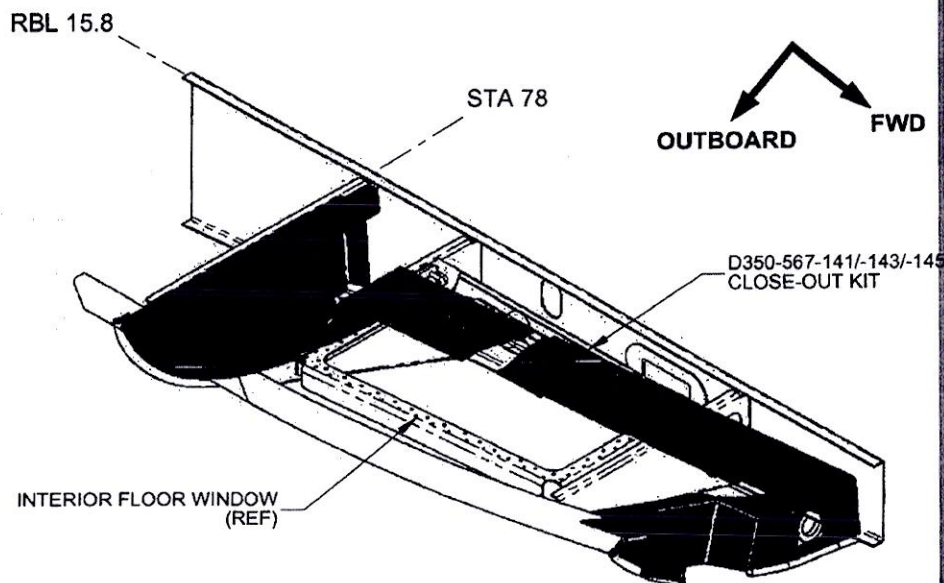


Figure 1. Floor Window Close-out Kit Installation

F	ADDED D4434-047 TO -141 KIT SEE PAR14-372.	AJS	15.01.12
E	ADD -143/-145 KITS	RF	14.03.20
E	CLARIFY FIGURES 3-12	VS	13.09.11
C	CORRECT TYPO NAS1149FN816P WAS NAS1149FN882P	RF	12.03.13
B	MS35206-229 WAS AN525-632R6; NAS1149FN616P (Qty 14) WAS (Qty 9); MS21042L06 (Qty 7) WAS (Qty 9); ADD AN525-832R7, NAS1149FN882P & MS21042L08	RF	12.02.22
A	NEW ISSUE	RF	12.01.09
REV.	DESCRIPTION	BY	DATE
DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 1 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD	

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145 Floor Window Close-out Kit	3.9 lb 1.77 kg	17.9 in 0.45 m	69.8 in-lb 0.80 m-k-g	65.5 in 1.66 m	255.5 in-lb 2.94 m-k-g

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 D350-567-115 - OK to remove D3295-041
 D350-567-031 - OK to remove D3212-1
 D350-567-011 - OK to remove D2214
 D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD	

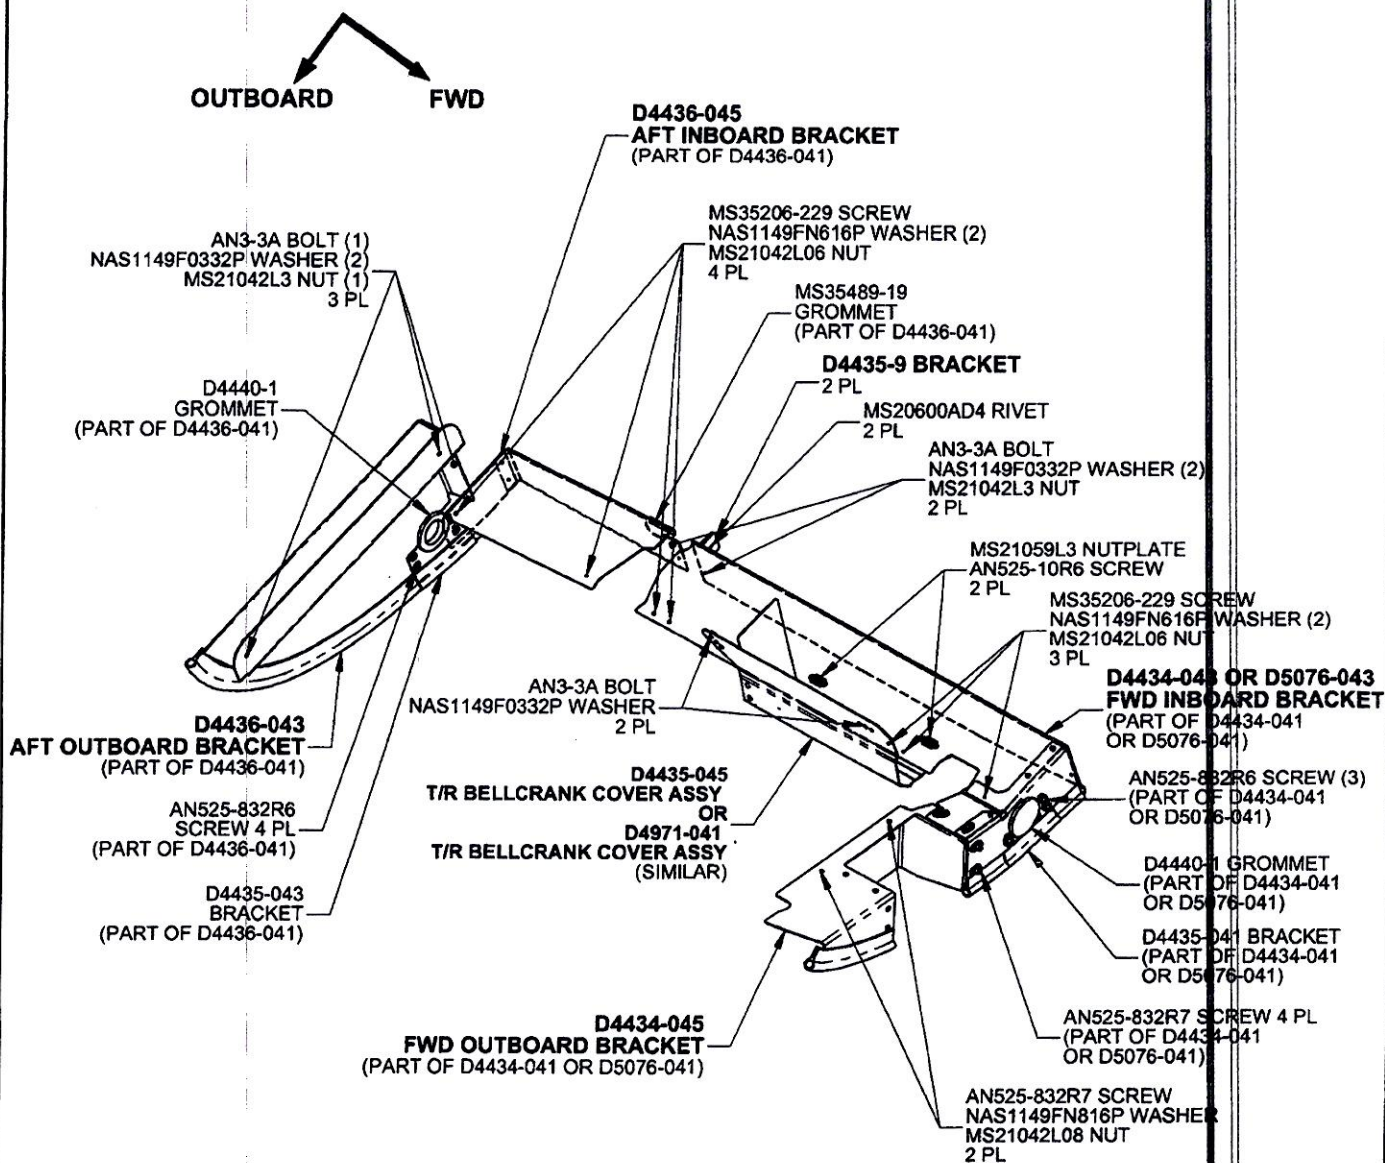


Figure 2. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 3 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.1 Temporarily install D4436-043 Aft Outboard Bracket and D4436-045 Aft Inboard Bracket using clecos and/or cleco clamps. Before drilling holes:

- a) Position the D4436-043 Aft Outboard Bracket so the flange contacts the main beam as shown in Figure 3.
- b) Confirm that the D4436-043 Aft Outboard Bracket and beam angle are parallel as shown in Figure 4.

4.2 Temporarily install D4434-043/D5076-043 Fwd Inboard Bracket and D4434-045 Fwd Outboard Bracket using clecos and cleco clamps. Confirm there is no contact between D4436-045 Aft Inboard Bracket and D4434-043 /D5076-043 Fwd Inboard Bracket and main beam gusset as shown in Figure 5.

 4.3 For -141 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.4 For -143 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Install D4971-041 T/R Bellcrank cover as shown in Figure 13b. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.5 For -145 installations, if aircraft is equipped with Collective Circuit Breaker Board box, use D5076-043 Fwd Inboard Bracket as shown in Figure 13c. Install D4971-041 T/R Bellcrank cover as shown in Figure 13c. Note: Confirm the D5076-3 Cover fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.6 Drill out rivets holding plastic wire bundle stand offs. Transfer drill $\varnothing 0.144$ holes to D4436-045 Aft Inboard Bracket per Figure 6. Transfer drill 2 x $\varnothing 0.144$ holes to D4434-043/D5076-043 Fwd Inboard Bracket per Figure 7. Transfer drill 2 x $\varnothing 0.144$ holes for D4434-043/D5076-043 Fwd Inboard Bracket per Figure 8. Before drilling confirm the D4434-043/D5076-043 and D4436-045 brackets are flush with outboard edge of main beam flange. Assemble D4436-045 Aft Inboard Bracket and D4434-043/D5076-043 Fwd Inboard Bracket and wire bundle stand offs to main beam flange using MS35206-229 screw, NAS1149FN616P washer and MS21042L06 nut.

4.7 Install D4436-043 Aft Outboard Bracket using AN3-3A bolt and NAS1149F0332P washer and MS21042L3 nut per Figure 9.

4.8 Remove 2 rivets holding RH heating plastic stand off as shown in Figure 10. Position the D4435-9 Brackets on the in/outboard sides of the cross beam and transfer drill 2 x $\varnothing 0.129$ holes from crossbeam to both D4435-9 Brackets. Install D4435-9 Brackets and RH heating plastic stand off using MS20600AD4 rivets or equivalent.

4.9 Drill a pilot hole from D4435-9 Bracket to the D4434-043/D5076-043 Fwd Inboard Bracket and D4436-045 Aft Inboard Bracket and open to $\varnothing 0.191$. Install AN3-3A bolt, NAS1149F0332P washer and MS21042L3 nut as shown in Figure 10. Be sure to maintain edge distance.

4.10 Transfer drill 2 x $\varnothing 0.144$ holes from crossbeam to D4434-045 Fwd Outboard Bracket if holes exist in crossbeam. If holes do not exist, drill 2 x $\varnothing 0.144$ holes at either end of D4434-045 bracket as shown in Figure 11. Install AN525-832R7 screws, NAS1149FN816P washer and MS21042L08 nuts.

4.11 FOR D350-567-141 KIT

a) Align D4435-045 T/R Bellcrank Cover Assy with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12a.

b) Transfer drill 2 x $\varnothing 0.098$ holes from D4435-045 T/R Bellcrank Cover Assy to D4434-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043 Fwd Inboard Bracket as shown in Figure 12a and Figure 13a. Install D4435-045 T/R Bellcrank Cover Assy using AN525-10R6 screw, AN3-3A bolt and NAS1149F0332P washer per Figure 12a and Figure 13a.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6


DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 4 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.12 FOR D350-567-143/-145 KIT

- a) Remove the D4972-041 Side Plate Assy from the D4971-041 T/R Bellcrank Cover Assy and retain fasteners.
 - b) Align D4971-1 T/R Bellcrank Cover with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12b.
 - c) Bond D4730-020-030 Velcro to back of D4971-1 T/R Bellcrank Cover as shown in Figure 12b using CB 200 adhesive.
 - d) Transfer drill 2 x $\varnothing 0.098$ holes from D4971-1 Cover Plate to D4434-043/D5076-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043/D5076-043 Fwd Inboard Bracket as shown in Figure 13b/13c. Install D4971-1 Cover Plate using AN525-10R6 screws and D4730-020-030 Velcro per Figure 12b and Figure 13b/13c.
 - e) Re-install the D4972-041 Side Plate Assy using the retained fasteners.
- 4.13 The D4440-1 grommets are provided to facilitate the routing of wiring harness thru the close-out kit as required. The wiring harness should be secure to the aircraft structure per AC 43.13.13-1B or AS350 Chapter 20.02.01.
- 4.14 Use the D3802-1-024 Seal to fill gaps between the brackets and the cowlings that are larger than 0.25 inch.
- 4.15 Perform travel/interference check of the flight controls to ensure there is no interference and all controls still have full travel.
- 4.16 Ensure there is a gap between the components of the D350-567-141/-143/-145 Close-out Kit and the aircraft structure so that the Close-out Kit does not chafe, interfere, or cause damage to the surrounding aircraft structure. In areas where the D350-567-141 /-143/-145 Close-out Kit may contact the aircraft structure, protect from abrasion using chafing tape or a layer Proseal 890 or MIL-S-8802 class B2 sealant or equivalent as required.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 5 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

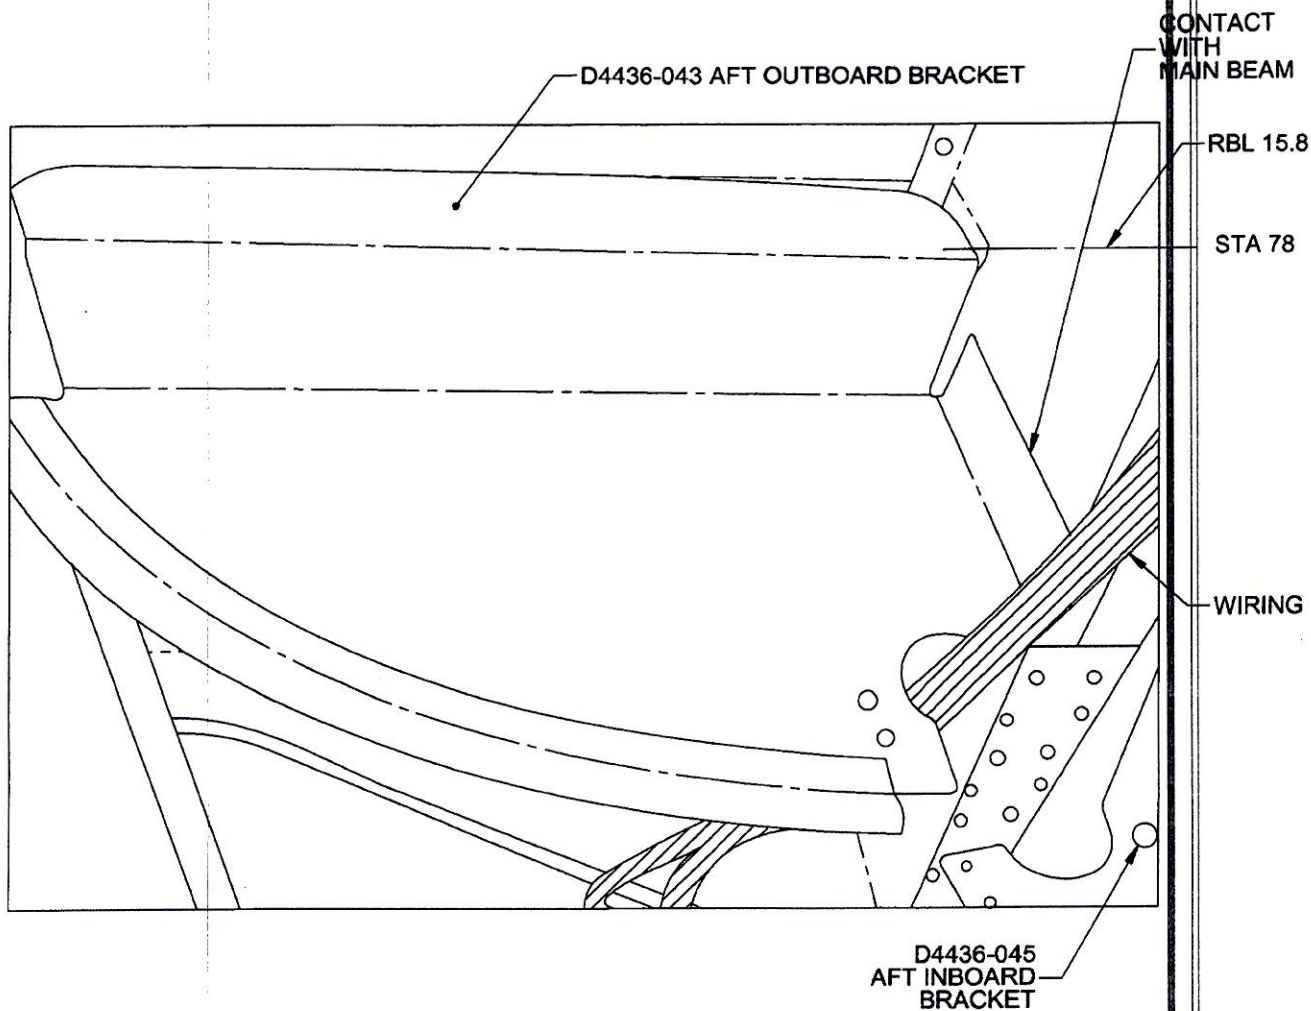


Figure 3. D4436-043 Aft Outboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A		SHEET 6 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

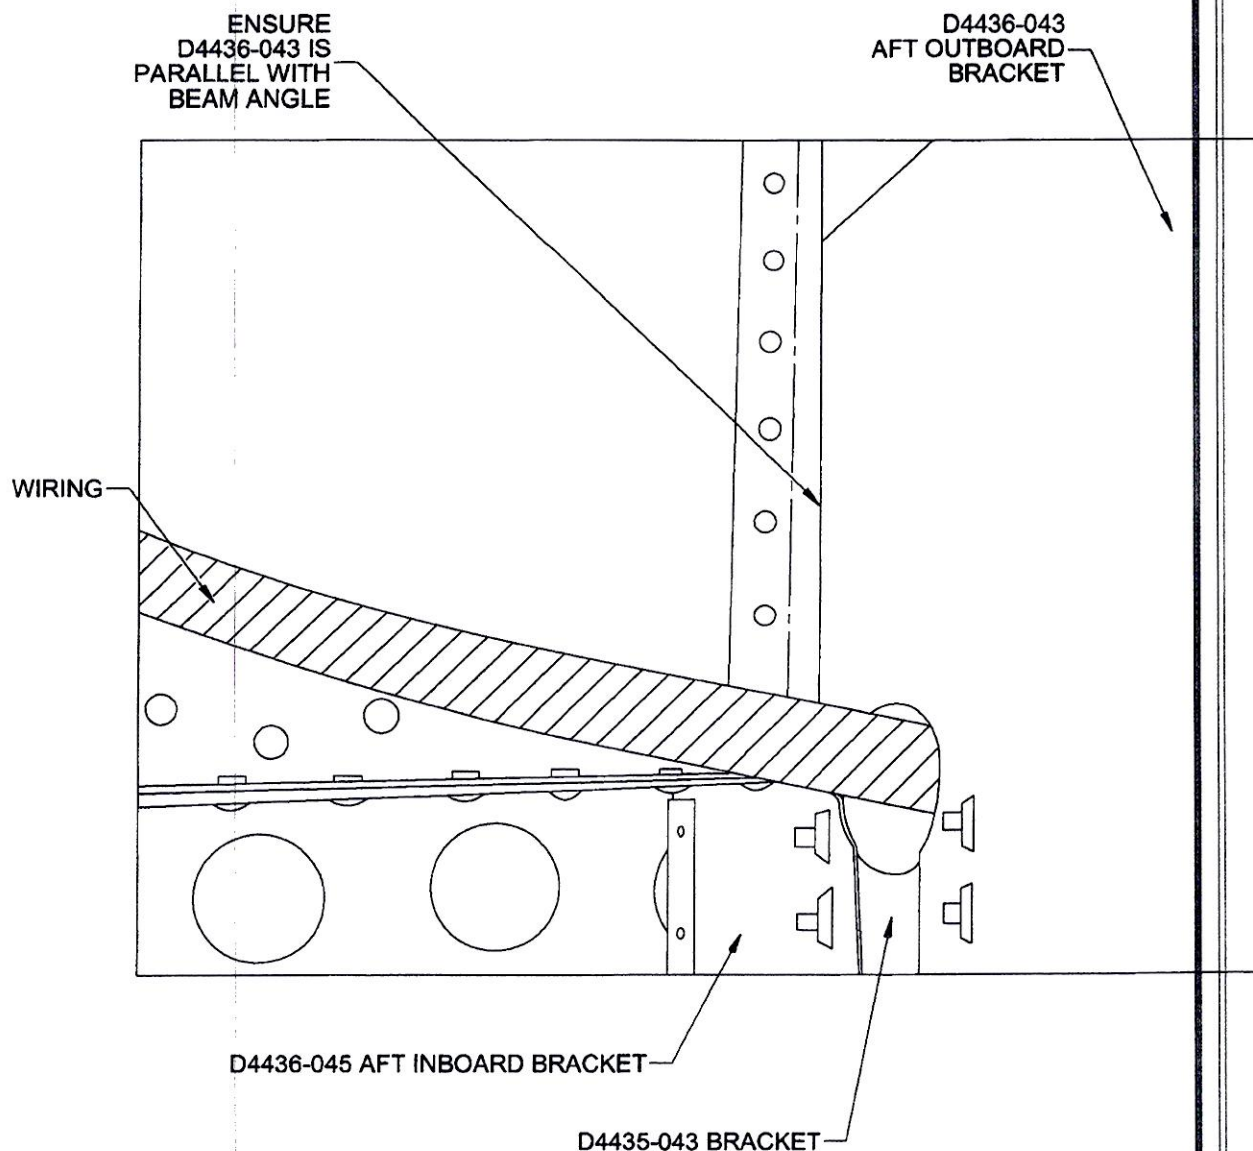


Figure 4. D4436-043 & D4435-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 7 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

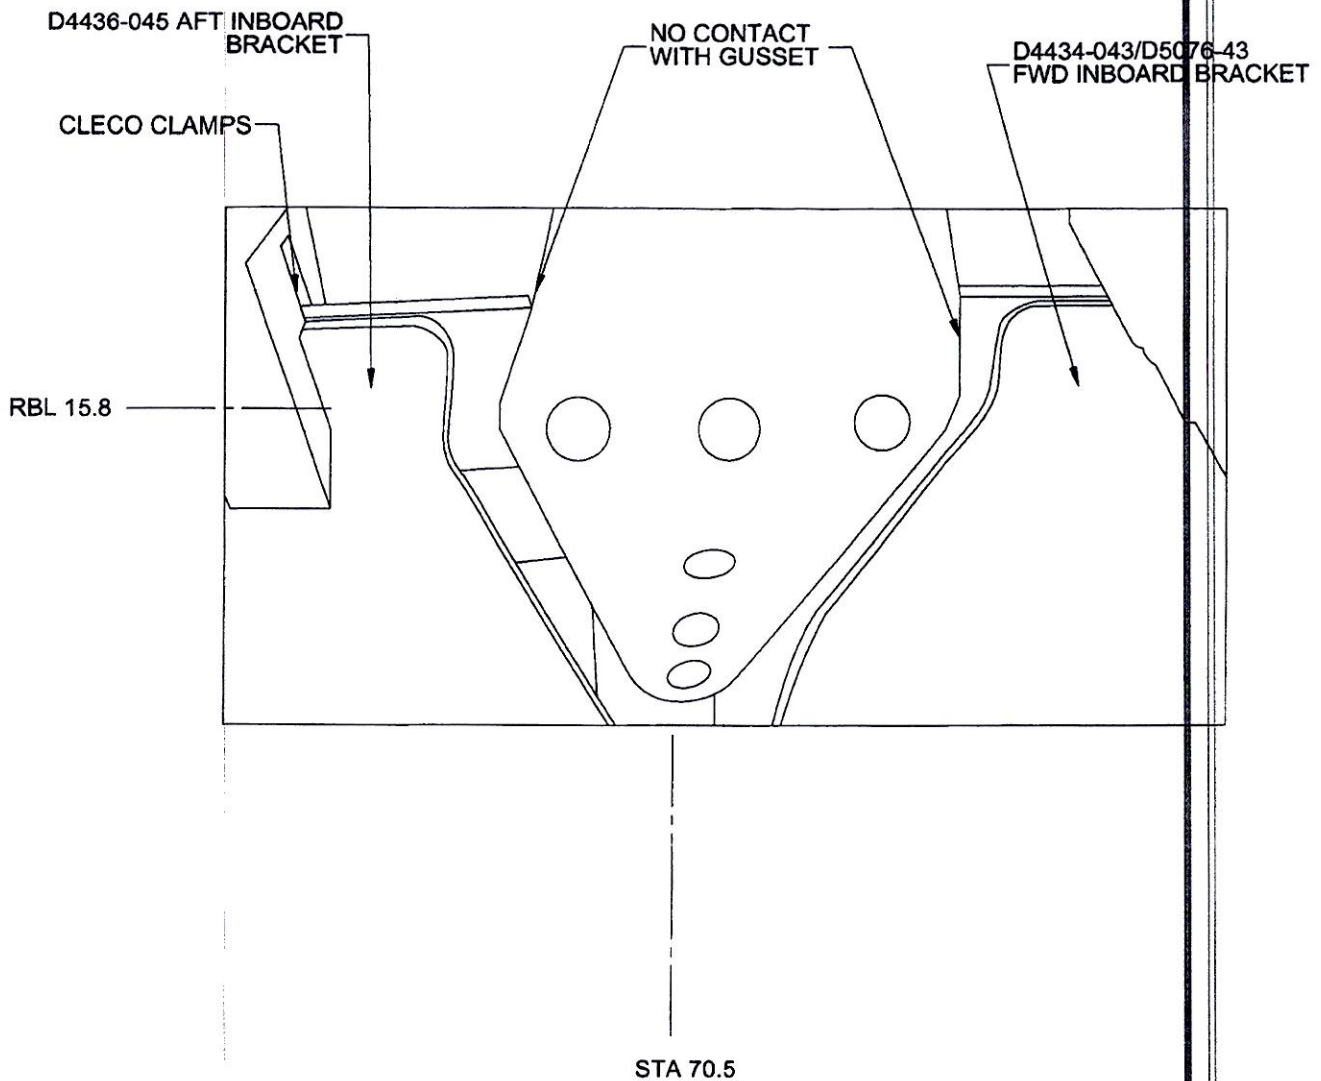


Figure 5. D4436-045 & D4434-043/D5076-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 8 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

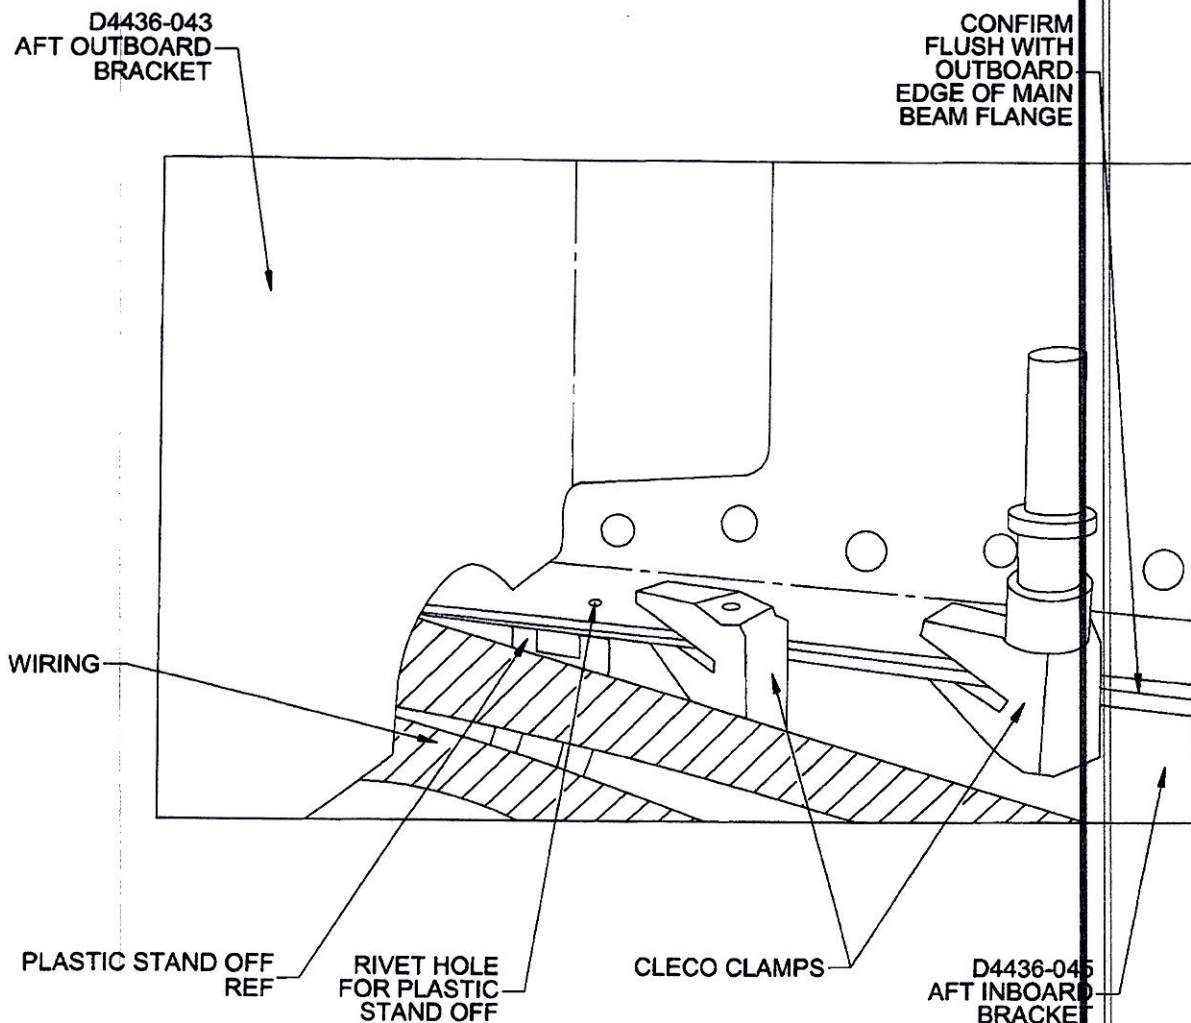


Figure 6. D4436-043 & D4436-045 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	A.S		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 9 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

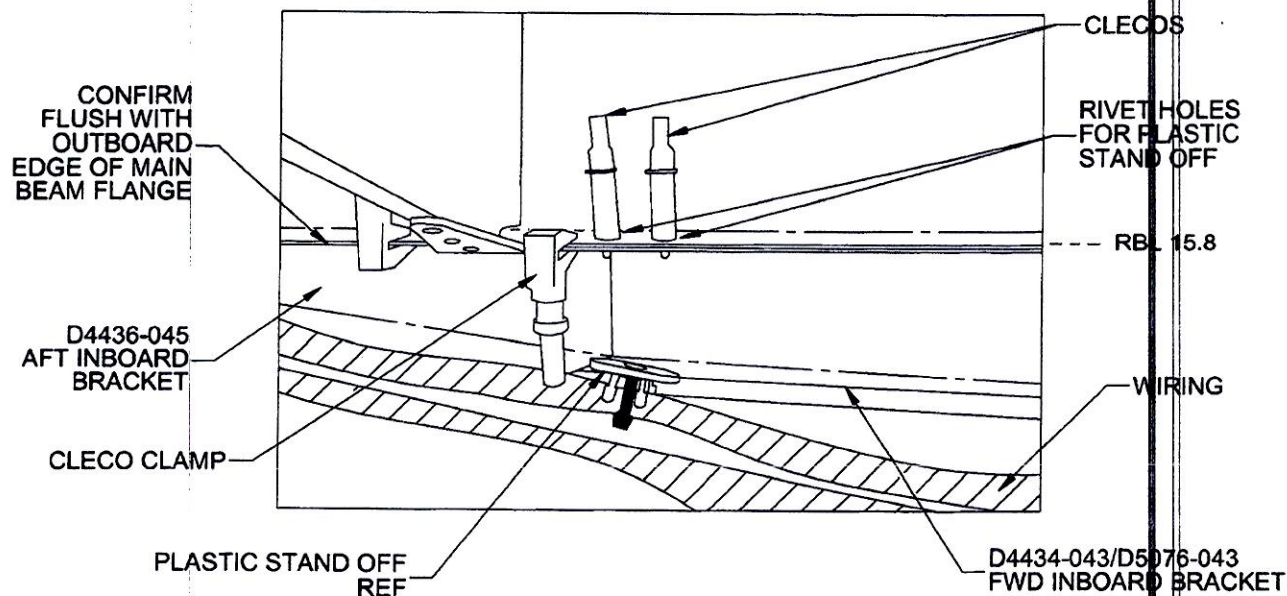


Figure 7. D4434-043/D5076-043 & D4436-045 Brackets Installation

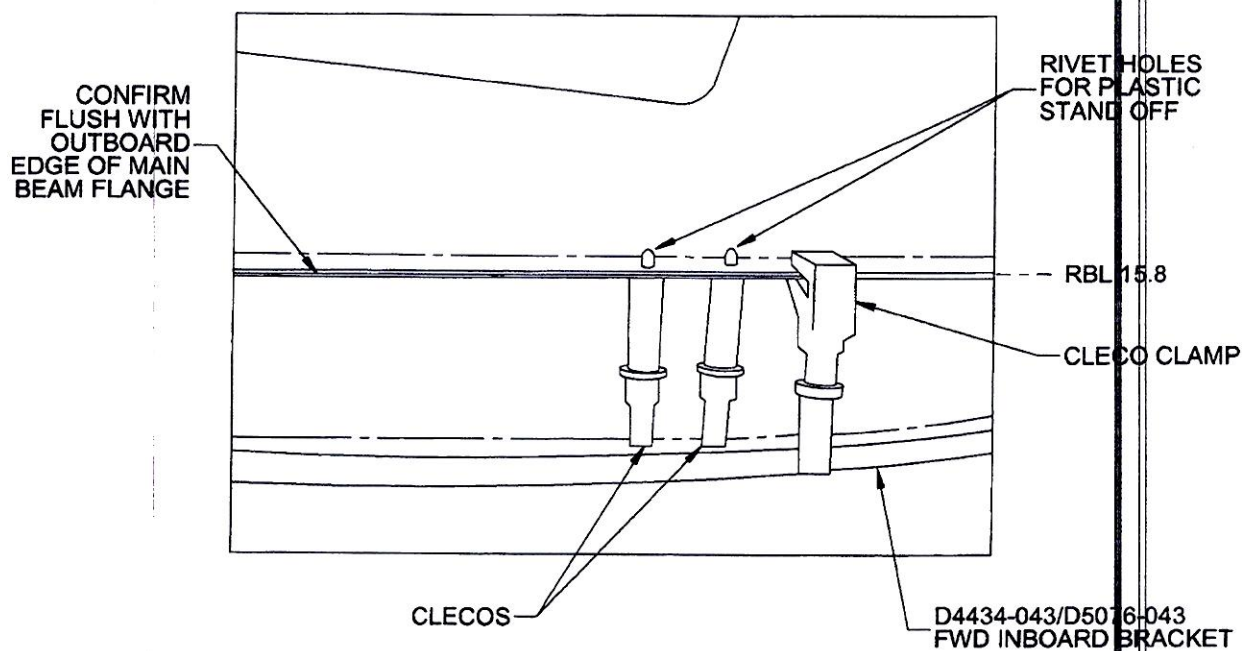


Figure 8. D4434-043/D5076-043 Fwd Inboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 10 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

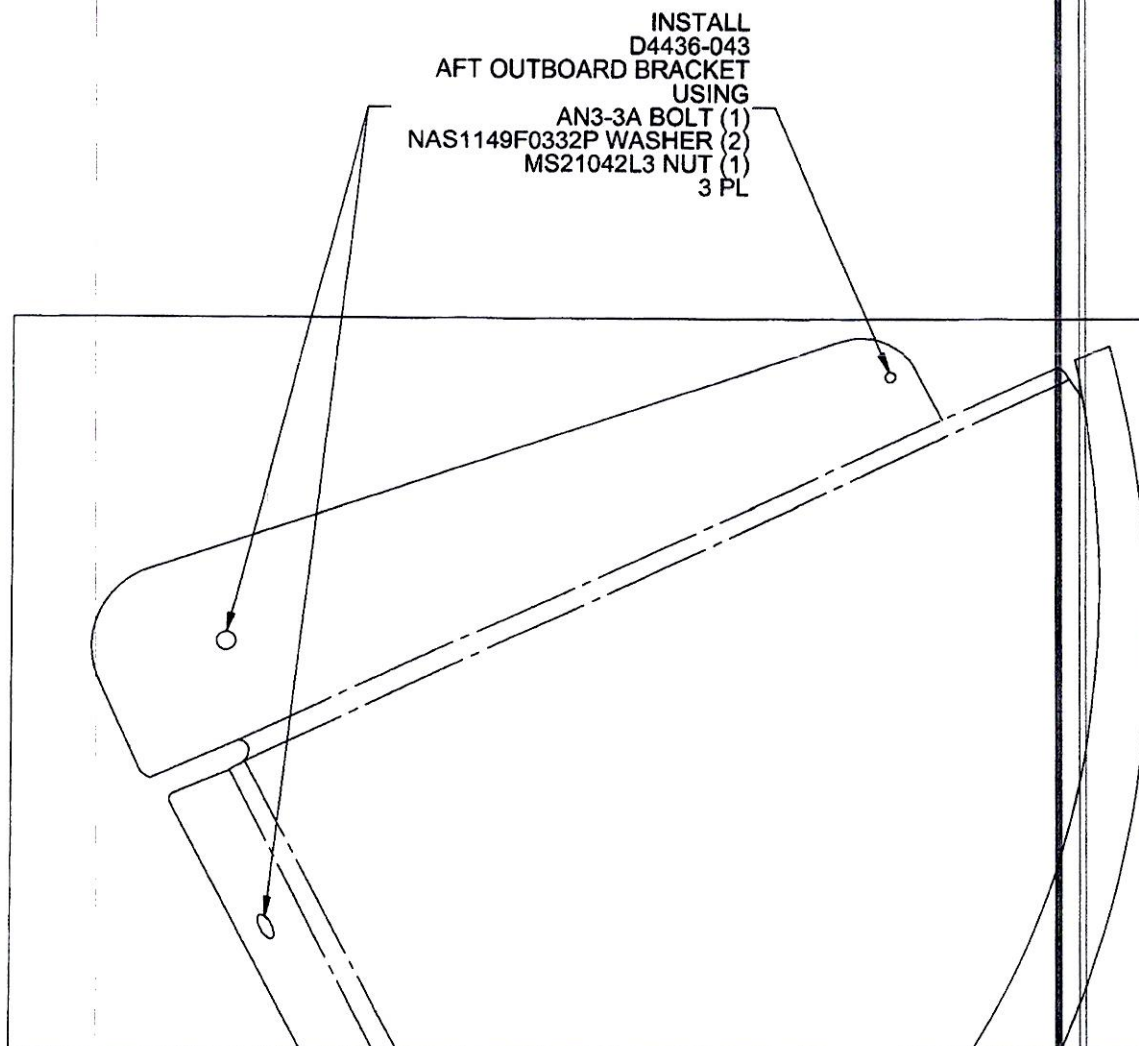


Figure 9. D4436-043 Aft Outboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01


APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	A/S	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 11 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

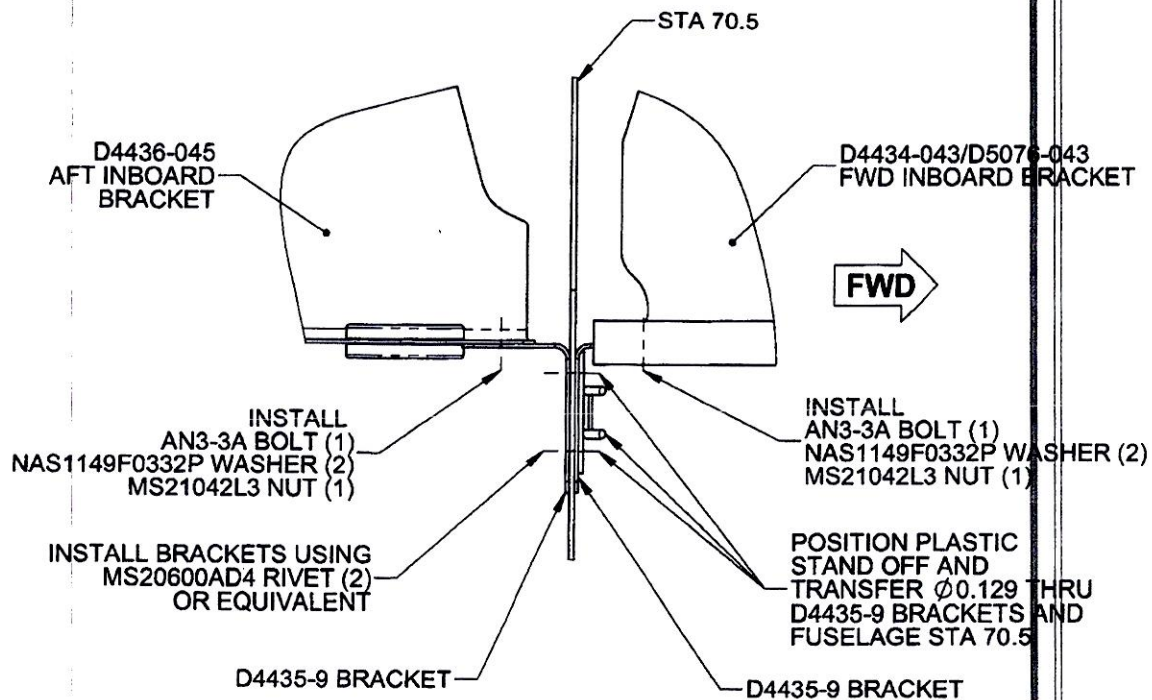

LOOKING UP AT STA 70.5

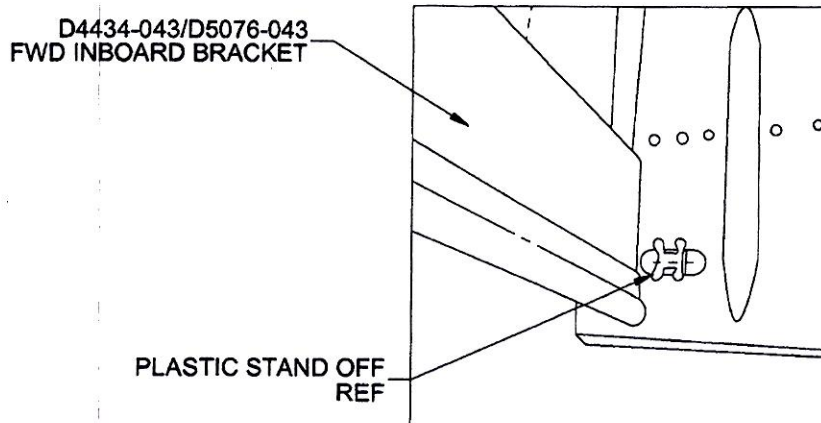


Figure 10. D4434-043/D5076-043 and D4435-9 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 12 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT IT			

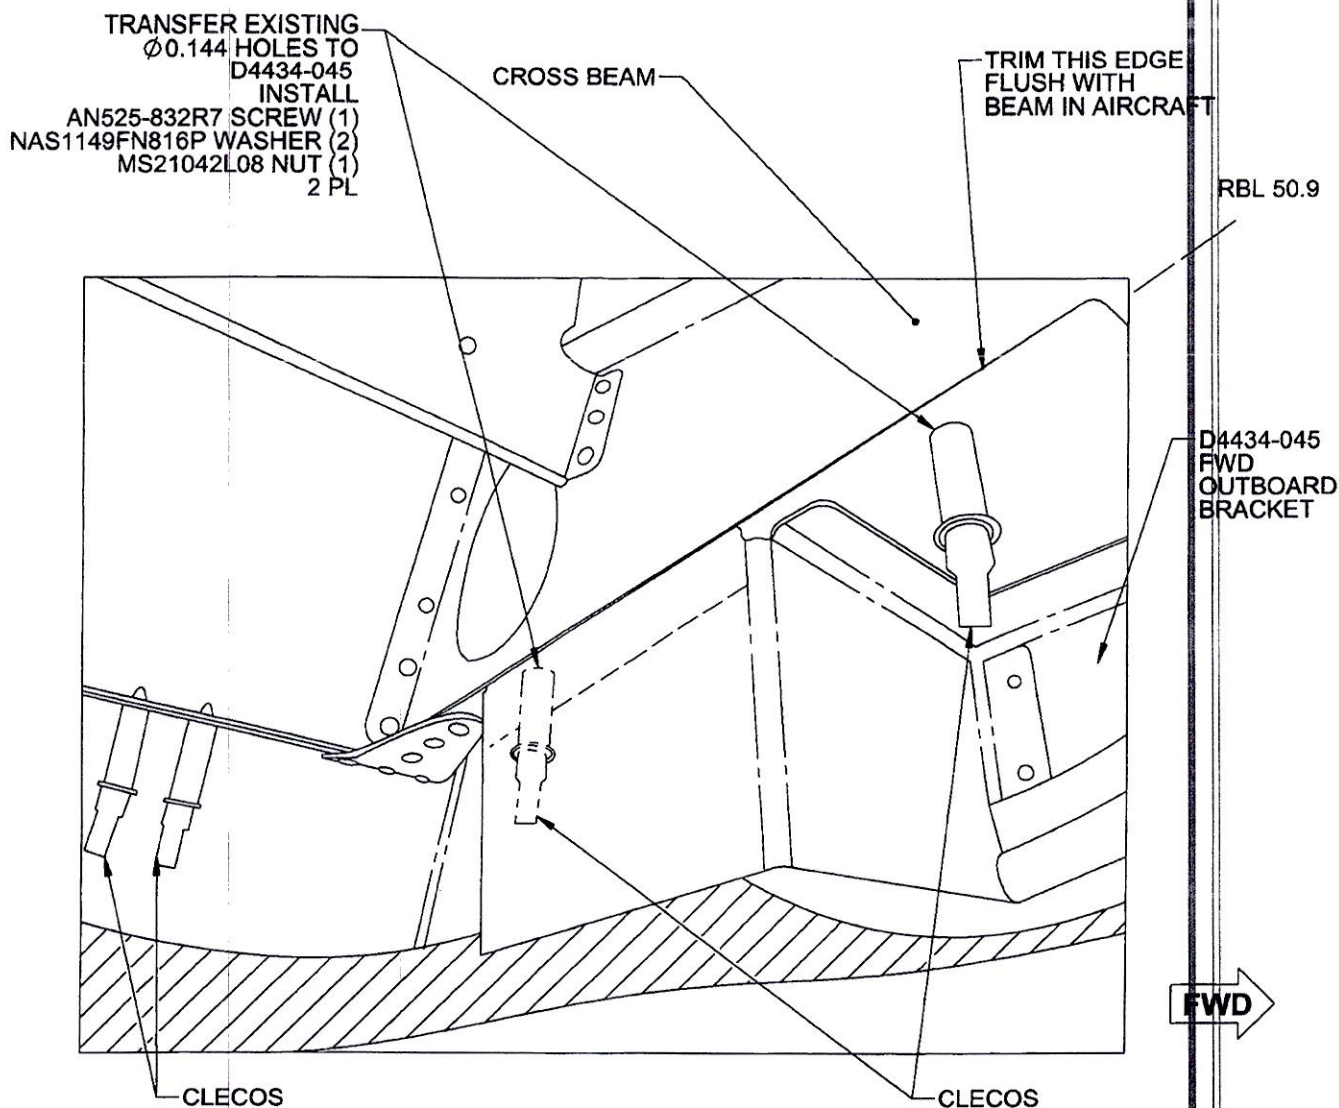


Figure 11. D4434-045 Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 13 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

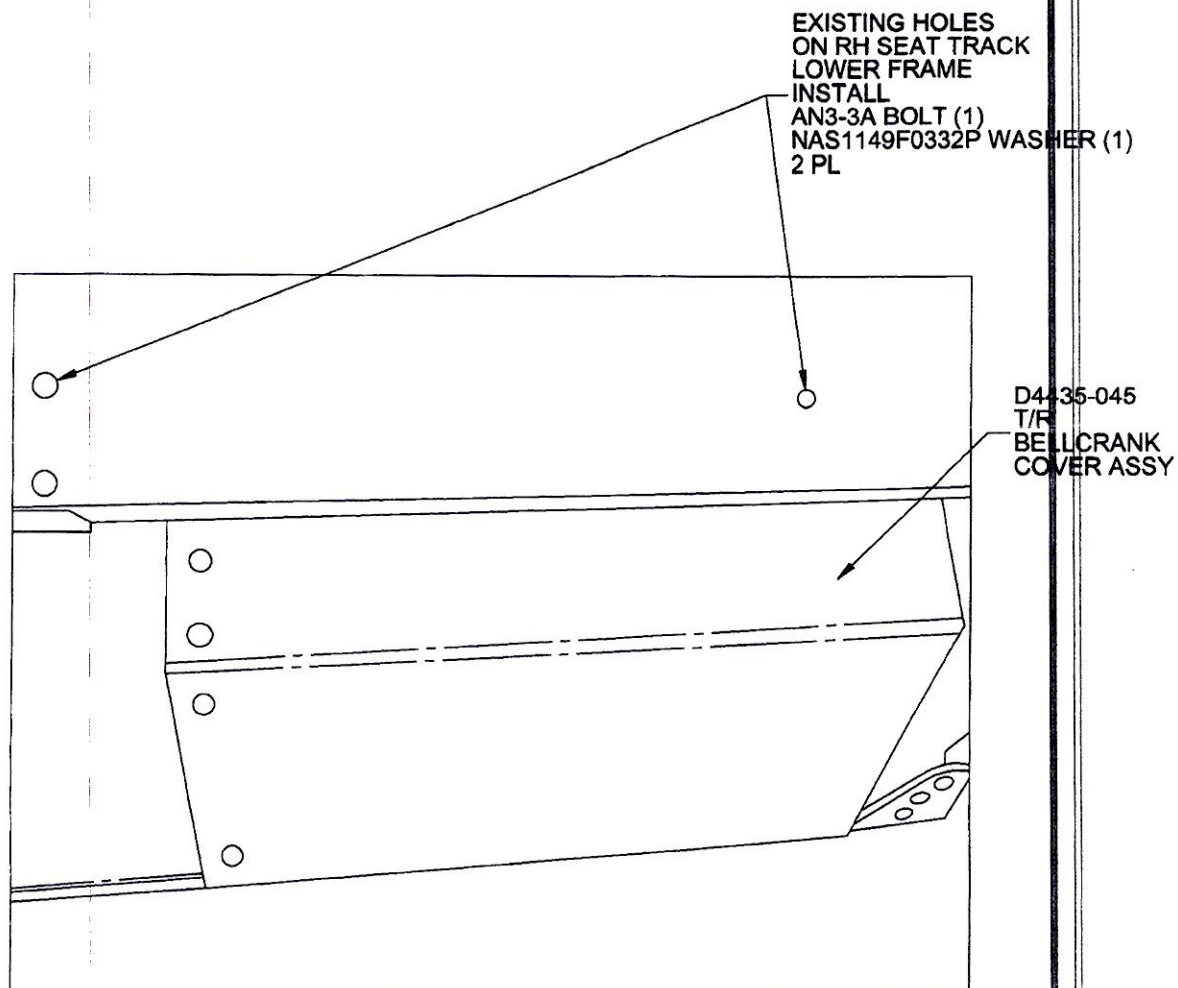


Figure 12a. D4435-045 T/R Bellcrank Cover Installation (-141)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 14 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

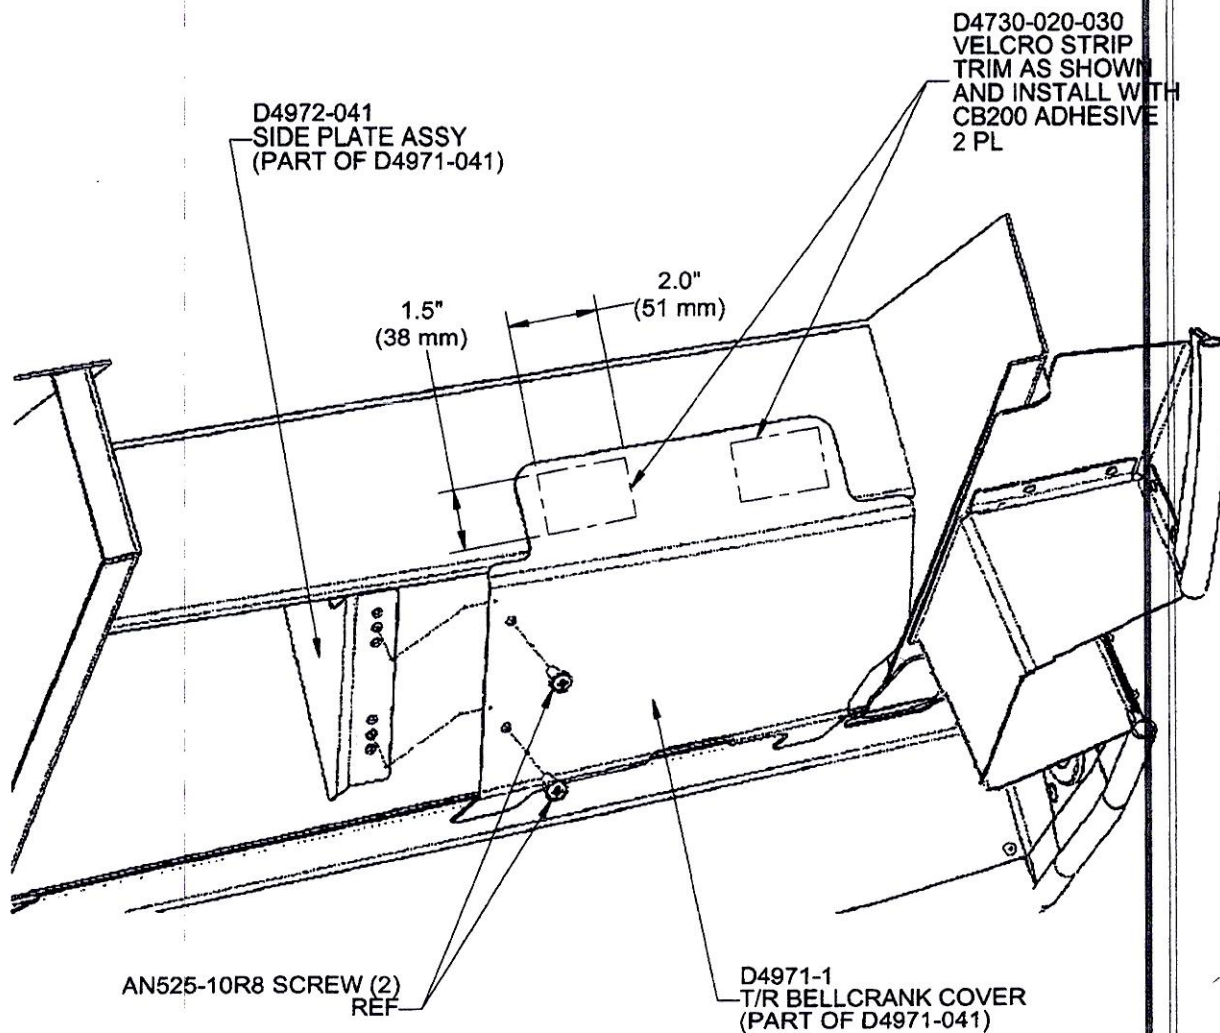


Figure 12b. D4971-041 T/R Bellcrank Cover Assy Installation (-143/-145)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 15 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

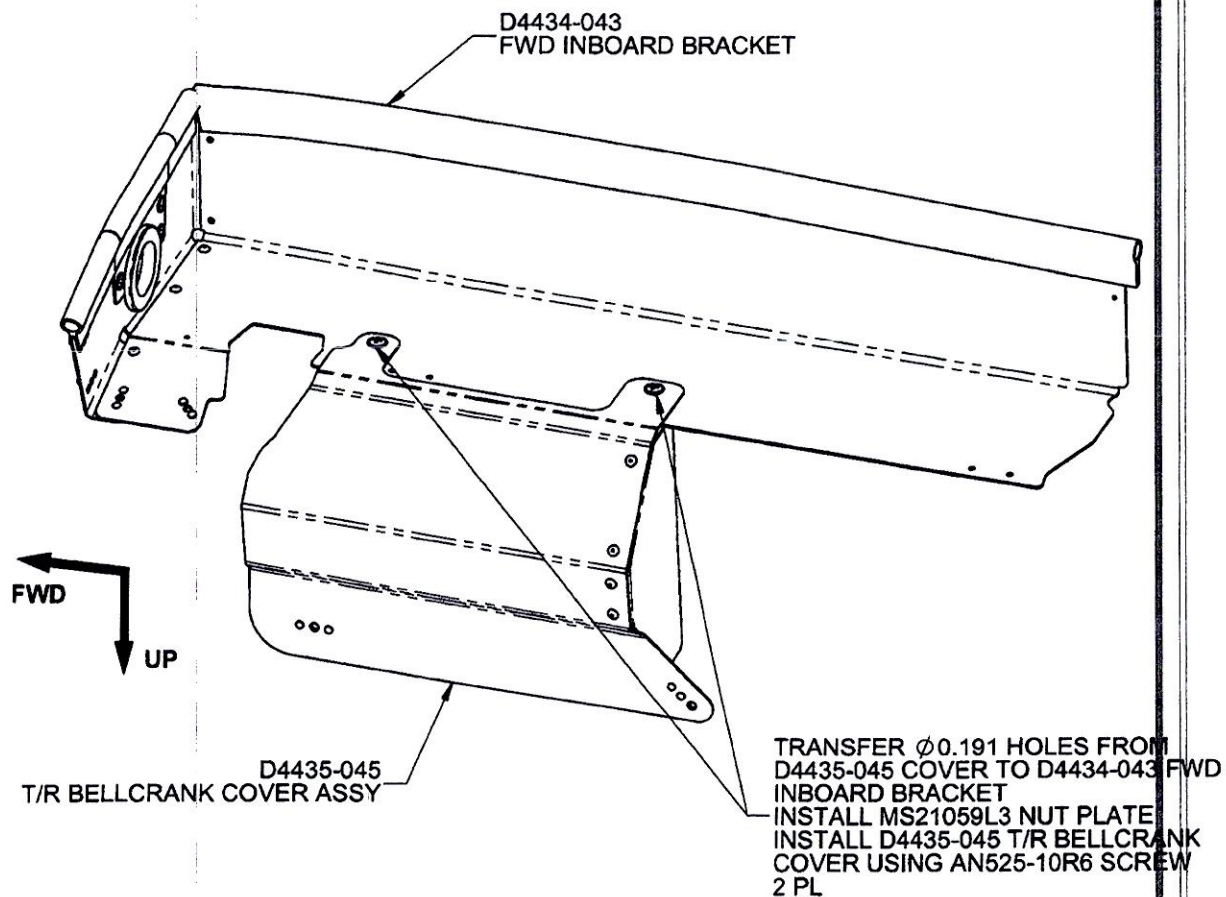


Figure 13a. D4435-045 Cover Installation (-141 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 16 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

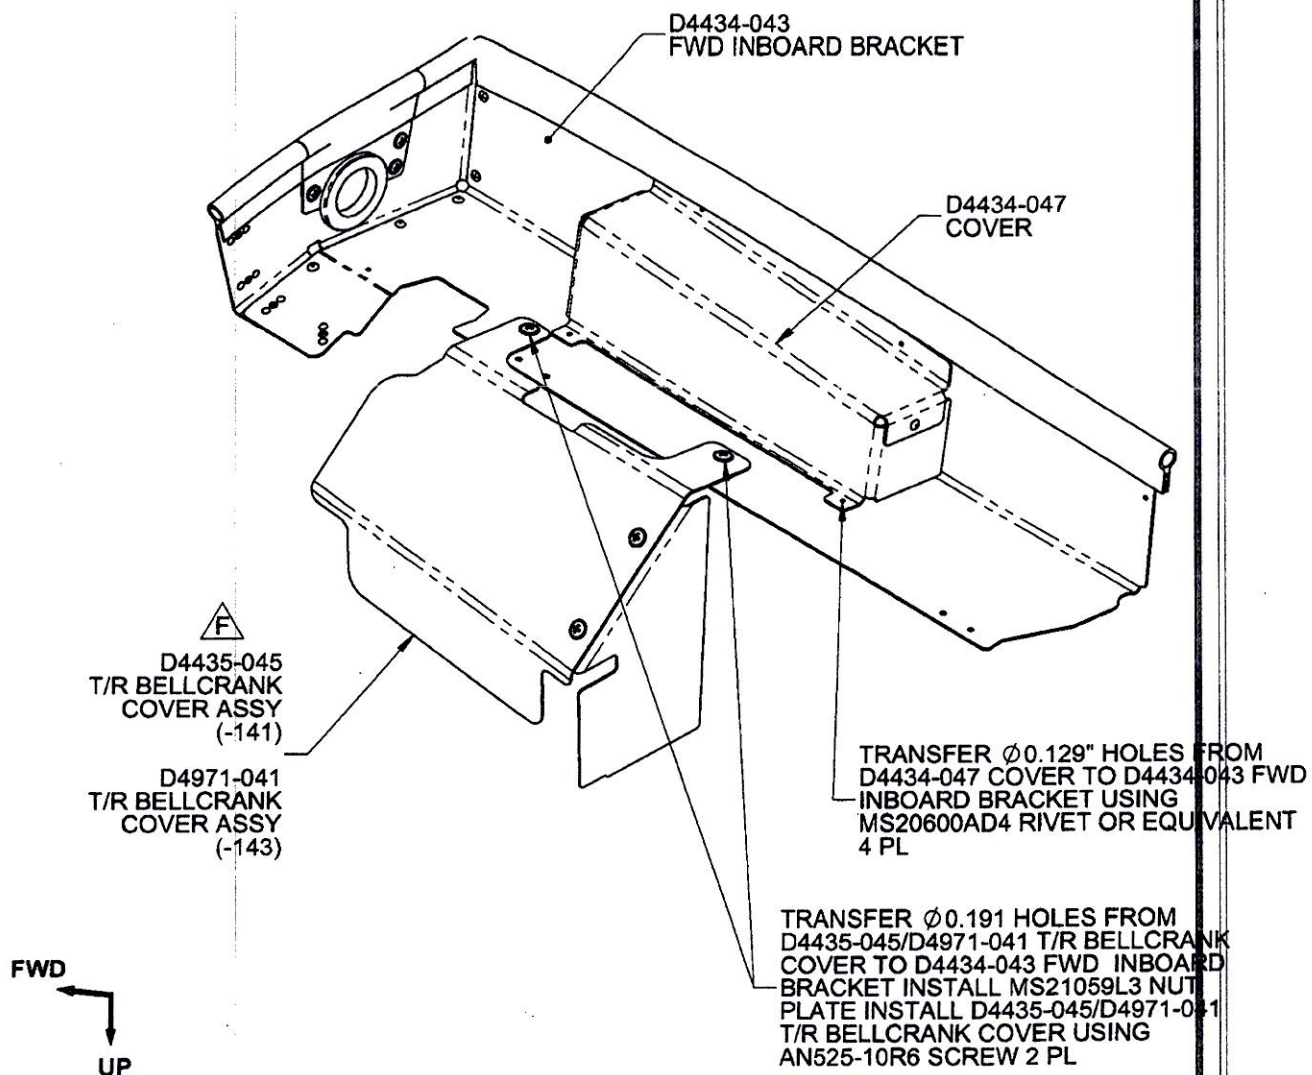


Figure 13b. D4971-041/D4435-045 & D4434-047 Cover Installation △
(D4434-047 is Optional on -141)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	AJS	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 17 OF 19	
APPROVED	AJS	TITLE	SCALE
DE APPR.	AJS	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

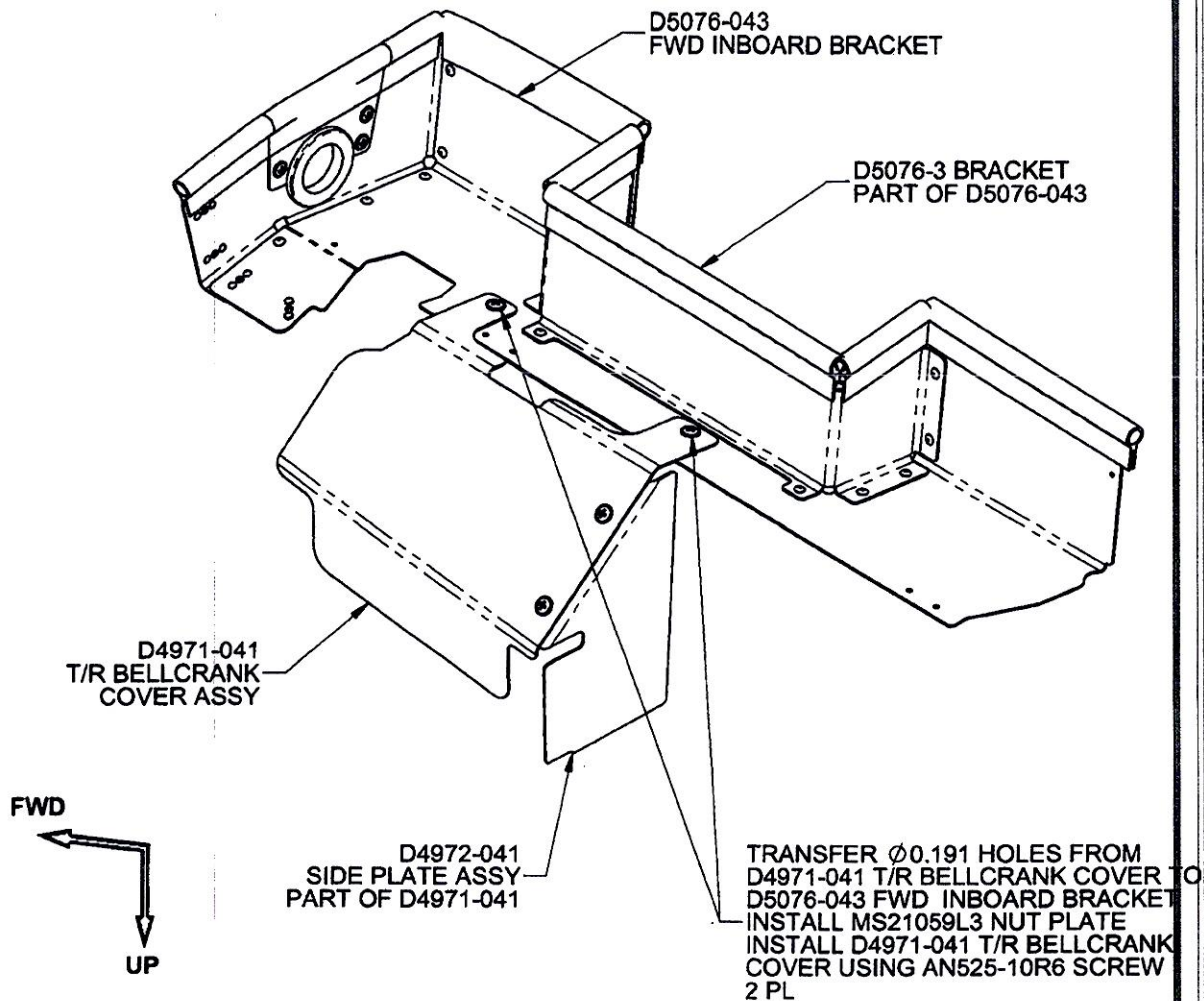


Figure 13c. D4971-041 INSTALLATION INTO D5076-043 (-145 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 18 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

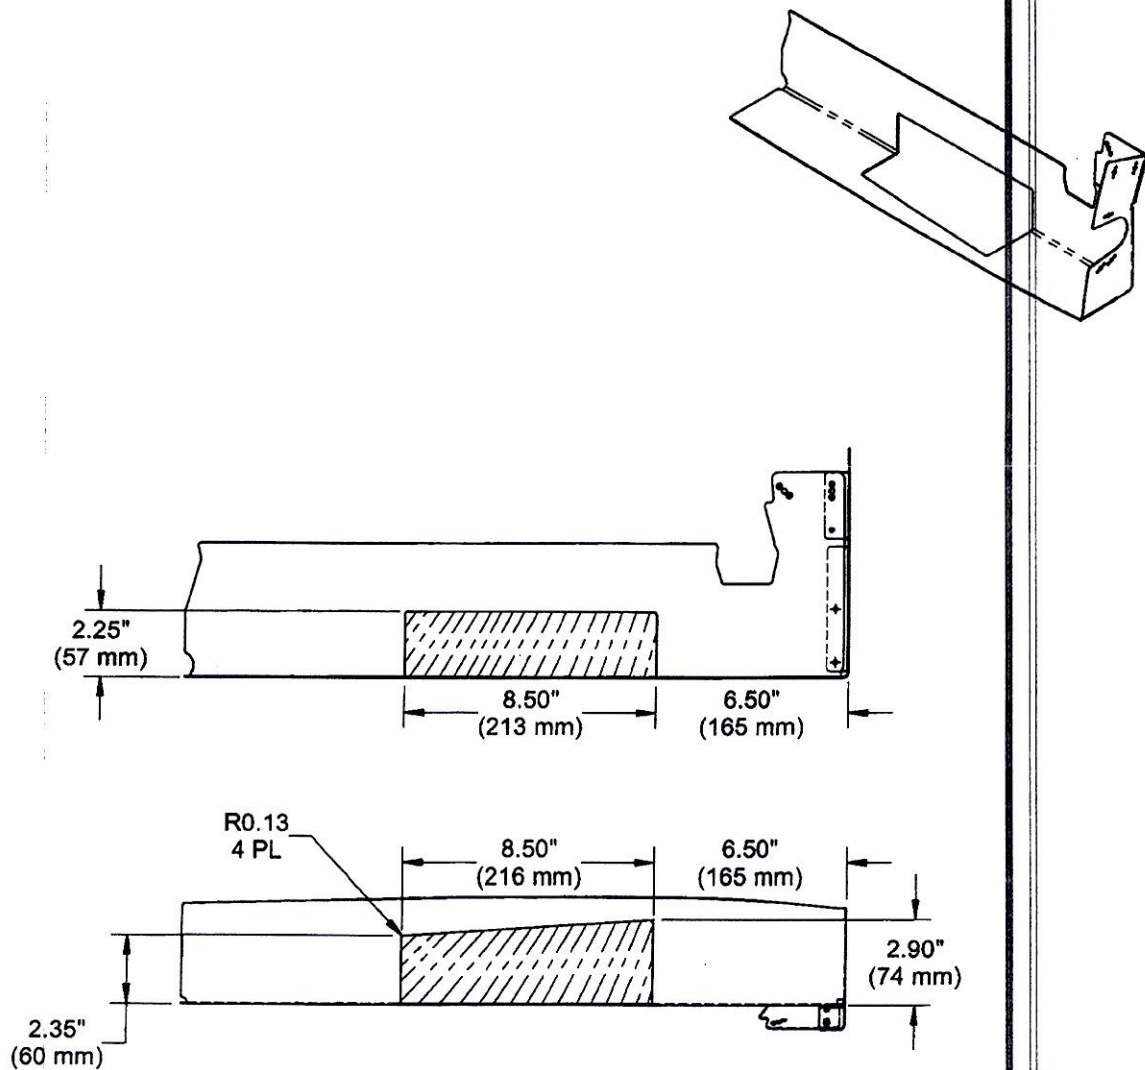


Figure 14. D4434-043 Fwd Inboard Bracket Cutout

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 19 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kG	1.66 m	2.94 m-kG

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 - D350-567-115 - OK to remove D3295-041
 - D350-567-031 - OK to remove D3212-1
 - D350-567-011 - OK to remove D2214
 - D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE 15.01.12		COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	